

PursaDisk


Installation Instructions


Supplies Included:

- Red Duct Tape
- Plumbing Tape
- Plastic Wrap
- Allen wrench

Not Included:

- Scissor

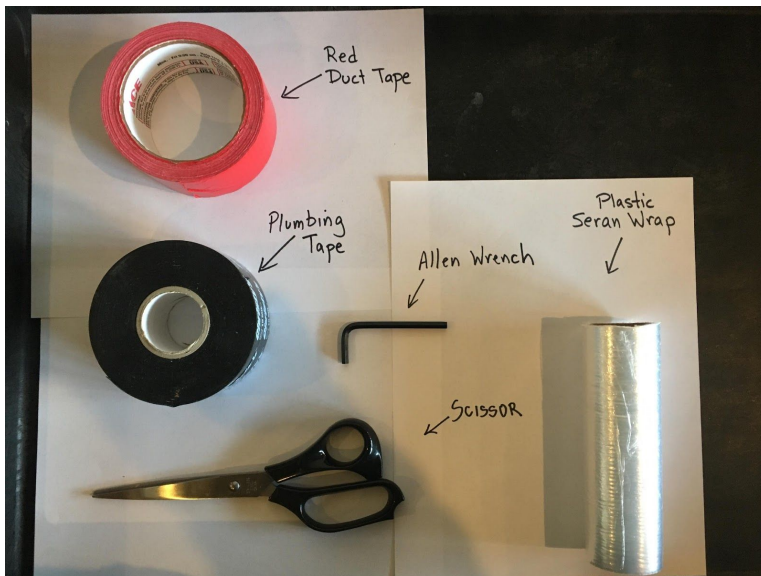

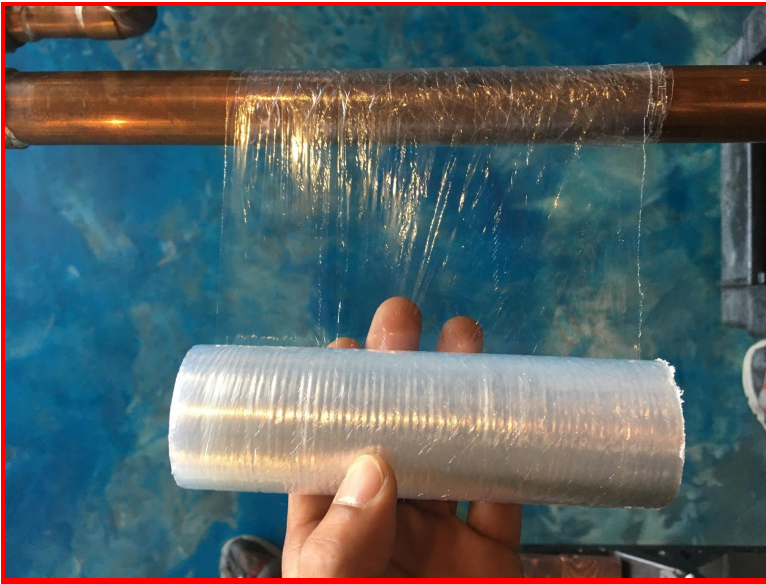

Locate a place on the pipe 5 feet away from 220 volt and 36 inches away from 110 volt outlet.

Wrap pipe with Plastic Wrap about 5 times.



Wrap with Plumbers Tape to a thickness of about $\frac{1}{4}$ inch.



For the next step it is advisable to have an assistant to insure the Disk is not accidentally dropped.

Using the provided Allen key, separate the two sides of the Disk and install on the pipe with the arrow (next to the serial number) and the blue inlays pointing in the direction of the water flow.



Carefully fit the PursaDisk leaving a 2mm gap

Tighten each side little by little until each side has a 2mm gap as show above.



Close the gap evenly using the Allen Key and make it snug. Do not over tighten.



Apply Plastic Wrap around the Disc about 5 times



Press Plastic Wrap to make it fit tight around the Disc and the pipe.



Begin wrapping the Disk with Duck Tape, starting evenly in the center.







Continue wrapping the Disk as shown, covering the sides and the pipe, covering the Plastic Wrap.









That's it. Now enjoy the savings and benefits from the PursaDisk.